

REQUIREMENTS FOR 100A OVERHEAD 120/240V TEMPORARY SERVICE

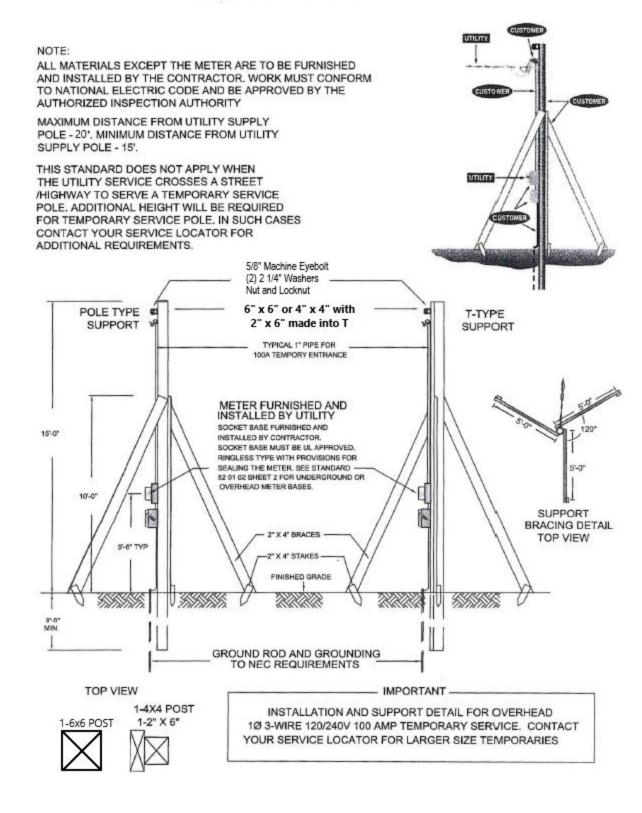

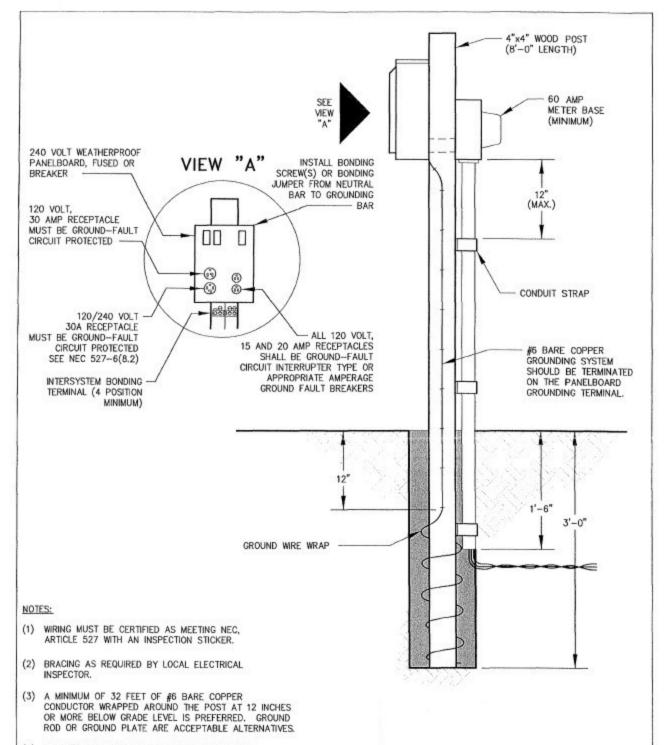

- (4) SEE NEC OR LOCAL ELECTRICAL INSPECTOR FOR ADDITIONAL INFORMATION.
- (5) Stub up 2.5" conduit at bottom of pole, or supply enough conduit to reach to the transformer. Rule of thumb would be 40' of wire. If supplying conduit please supply weatherhead.

Underground Temporary Service Guide

Caution High Voltage lines are in area of transformer. MCRECC's Engineering Department will spot location to set temporary pole.

